
SUPREME ALUMINIUM
ADJUSTABLE DOOR FRAME KITS

Contents for Adjustable Door Frames

PART A (Main Frame)
Stiles x 2
Head x 1




PART B (Adjuster)
Stiles x 2
Head x 1




PART C (Architrave)
Stiles x 4
Head x 2



Hinges x 3
8 Gauge Counter Sunk Screws (20mm) x9
8 Gauge Counter Sunk Screws (36mm) x9
8 Gauge Pan Head Screws (25mm) x9

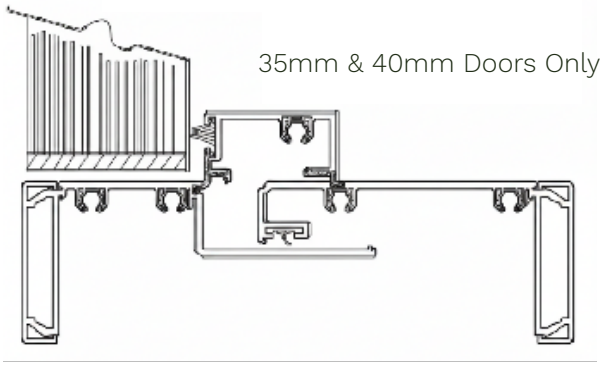

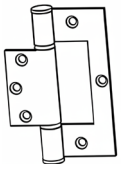


Assembly Instructions

1. Screw (Part A) sections together with 8 gauge x 25mm Pan Head screws supplied.
2. Screw (Part B) sections together with 8 gauge x 25mm Pan Head screws supplied.
3. For Wall Opening Size refer to formula below.
4. Position (Part A & Part B) into the opening and squeeze together.
5. Square and plumb frame in place, then screw-fix it.
6. Take (Part C) and snap-fix vertical architraves first and then snap-fix horizontal pieces.
7. 2100 Door Frame is 2 hinges and 2700 is 3 hinges

NOTE: In all cases the hinges must be fixed 100mm max from top and 200mm max from bottom of door.

How to order your Supreme (Adjustable) Door Frame Kits

When ordering you door frames please give overall size as shown on diagram.

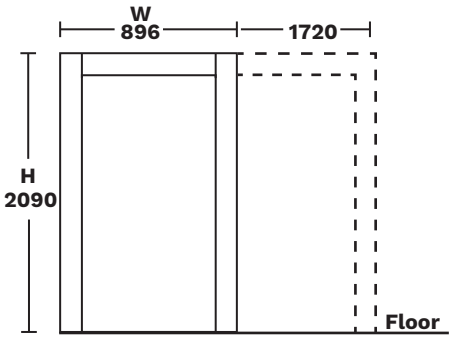

To establish opening in wall size:

- For a Single Door Frame subtract 36mm from W shown(896) = 860mm
- For Double Door Frame subtract 36mm from W shown (1720) = 1684mm
- For the Height subtract 15mm from H shown (2090) = 2075mm

Example: for an 2040 x 820 door

Width =	Arch	35mm
	Door	820
	Clearance	6
	Arch	35mm
	Total	**869mm**

Height =	Arch	35mm
	Door	2040
	Clearance	15
	Total	**2090mm**

BRIS ALUMINIUM

brisaluminium.com.au

21-29 STEEL PL, MORNINGSIDE, QLD 4170
PH: (07) 3260 6077