
SUPREME ALUMINIUM
DOOR FRAMES KITS

Contents for 2100h and 2700h Kits:

Stiles (long) x 2



Head (short) x 1



Stile Stop (long) x 2



Head Stop (short) x 1



Assembly Screws x 6



Hinge Screws (Door) x 9




Hinge Screws (Frame) x 9



Slam Strip

Hinges x 3
(Note only 2 hinges for 2100H)

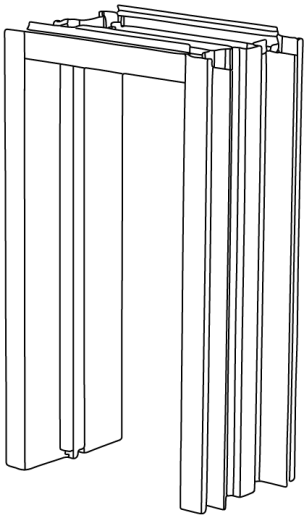


Assembly Instructions

1. Cut stiles to suit door height (allow clearance).
2. Insert Slam Strip into Head Stop and trim.
3. Screw-fix Stiles to Head through pre-drilled holes with¾ x 6 Pan head screws supplied.
4. Position Door Frame and pop rivet to studs through stud legs and stop recess.
5. Cut Stile Stops to length and insert Slam Strip. Snap-fix Stops into Frame starting at the top.
6. Wall can now be sheeted and care should be taken when fixing-off your door frames.
7. The Frame Section has an offset pocket, this allows various thickness of std Doors to be hung.

N.B. In all cases the hinges must be fixed 100mm max. from top and
200mm max. from bottom of door.

NOTE: Before fixing your frame always check the swing of the door.

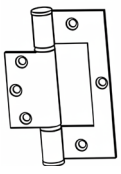Fix to Door  Fix to Frame

brisaluminium.com.au

21-29 STEEL PL, MORNINGSIDE, QLD 4170
PH: (07) 3260 6077

SUPREME ALUMINIUM
DOOR FRAMES KITS

64mm Supreme System:

35mm Door use DPS 20 Door Stop
(Facing Narrow side of Frame)

40mm Door use DPS 40 Door Stop
(Facing Narrow side of Frame)

45mm Door use DPS 76/20 Door Stop
(Facing Wide side of Frame)

76mm Supreme System:

35mm Door use DPS 76/20 Door Stop
(Facing Narrow side of Frame)

40mm Door use DPS 76/20 Door Stop
(Facing Wide side of Frame)

45mm Door use DPS 92/40 Door Stop
(Facing Wide side)

92mm Supreme System:

35mm Door use DPS 76/20 Door Stop
(Facing Narrow side of Frame)

40mm Door use DPS 92/40 Door Stop
(Facing Narrow side of Frame)

45mm Door use ECO 64/45 Door Stop
(Facing Narrow side of Frame)

64mm Econo-Wall/1 System:

35mm Door use DPS 20 Door Stop
(Facing Narrow side of Frame)

40mm Door use DPS 40 Door Stop
(Facing Narrow side of Frame)

45mm Door use DPS 76/20 Door Stop
(Facing Wide side of Frame)

76mm Econo-Wall/1 System:

35mm Door use DPS 76/20 Door Stop
(For either side of the Frame)

40mm Door use DPS 92/40 Door Stop
(Facing Narrow side of Frame)

45mm Door use ECO 64/45 Door Stop
(For either side of the Frame)

BRIS ALUMINIUM

brisaluminium.com.au

21-29 STEEL PL, MORNINGSIDE, QLD 4170
PH: (07) 3260 6077